


Compiler optimization:

"To adjust the compiler optimization level, please follow these steps:

Right-click on your project's **lab.ioc** file.

Select the **'Properties'** option, as demonstrated below:

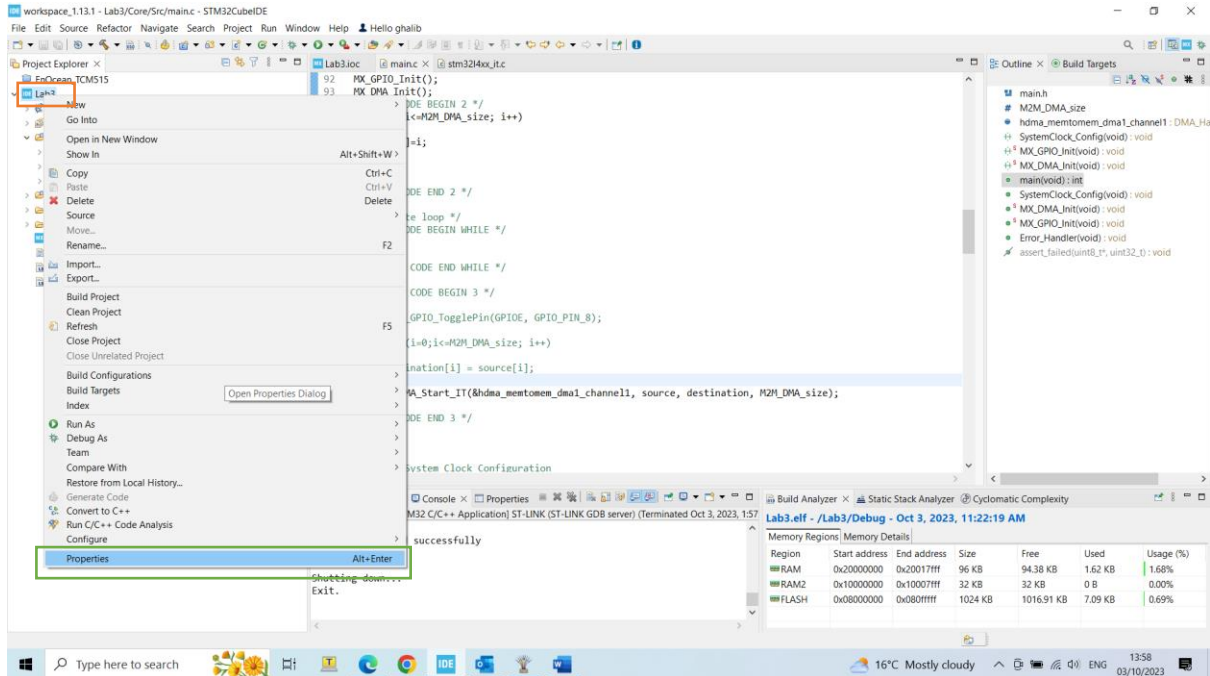

After the new screen appears, follow these steps:

Under 'C/C++ Build,' select 'Settings.'

In the 'Settings' tab, choose 'Tool Settings.'

Under 'Optimization Level,' select 'None (-O0).'

Finally, click the 'Apply' button and then close the window.

